
AIR1 RH 2000



Fig. shows accessories

Performance curve AIR1 RH 2000

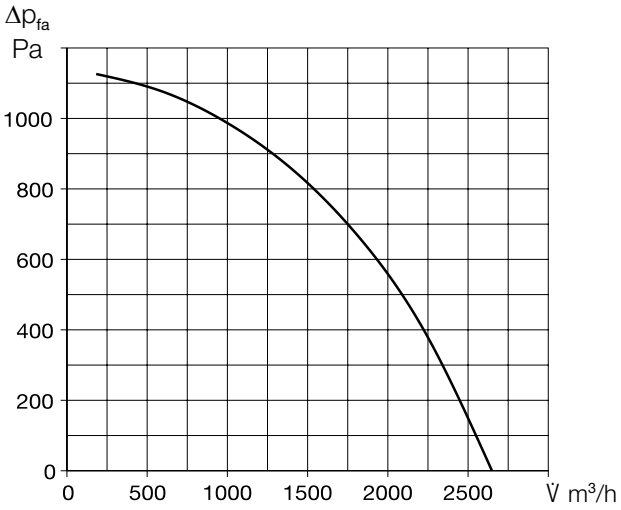

Unit types

	AIR1 RH 2000	AIR1 RH 2000/SO
Ref. no.	04344	04353
Heat exchanger	Condensation rotor	Adsorption rotor (4)

Technical data

Mechanical data	
Area of application	Inside/outside
Installation position	Standing
Maintenance access	Side, both sides
Min. air volume	330 m³/h
Max. air volume ERP	2,100 m³/h (1) (2,020 m³/h (5))
Max. air volume (free blowing)	2,650 m³/h
Weight, unit operational	361 kg (368 kg (5))
Delivery unit	1-part
Unit segments	1
Housing class (DIN 1886)	T2 / TB2 / D2
Filter Outside air	ISO ePM₁ 55% (F7) (2)
Filter Extract air	ISO ePM₁₀ 50% (M5) (2)
Media temperature (air)	-20 to +40 °C
Ambient temperature (place of installation)	-20 to +50 °C
Protection class	IP31
Electrical data	
Central building control system	BACnet, Modbus TCP/IP
Voltage / Frequency	400 V 3N ~, 50 Hz
Max. output Fans	2 x 780 W
Nominal current	
– Ventilation unit	3.4 / 3.4 / 1.3 A
– Electrical auxiliary heater	8.4 / 8.4 / 8.4 A (3)
– max. total	11.8 / 11.8 / 9.7 A
Connection (wiring diagram no.)	1318

(1) = at 250 Pa external pressure loss ERP-compliant
(2) = other filter classes see optional accessories
(3) = Optional accessories
(4) = with increased humidity recovery
(5) = AIR RH 2000/SO

Sound data AIR1 RH 2000

Sound power level L_{WA} dB(A) at 250 Pa external pressure

	600 m³/h	1,500 m³/h	2,100 m³/h
Supply air (L_{WA})	70	75	81
Extract air (L_{WA})	57	60	65
Outside air (L_{WA})	61	57	62
Exhaust air (L_{WA})	68	74	80

Sound pressure level L_{PA} dB(A) of sound radiated from housing

	600 m³/h	1,500 m³/h	2,100 m³/h
Housing rad. 1 m	39	41	46
Housing rad. 3 m	30	32	37
Housing rad. 5 m	25	27	32

The sound power at the connectors is calculated for the simultaneous operation of both fans. The sound pressure level is determined for the simultaneous operation of both fans at distances of 1.3 and 5 m.

Sound data AIR1 RH 2000/SO

Sound power level L_{WA} dB(A) at 250 Pa external pressure

	600 m³/h	1,500 m³/h	2,020 m³/h
Supply air (L_{WA})	70	76	81
Extract air (L_{WA})	57	60	64
Outside air (L_{WA})	61	57	61
Exhaust air (L_{WA})	69	74	79


Sound pressure level L_{PA} dB(A) of sound radiated from housing

	600 m³/h	1,500 m³/h	2,020 m³/h
Housing rad. 1 m	40	42	46
Housing rad. 3 m	30	32	36
Housing rad. 5 m	26	28	32

The sound power at the connectors is calculated for the simultaneous operation of both fans. The sound pressure level is determined for the simultaneous operation of both fans at distances of 1.3 and 5 m.

Dimensions AIR1 RH 2000

View A (from above) View B View C

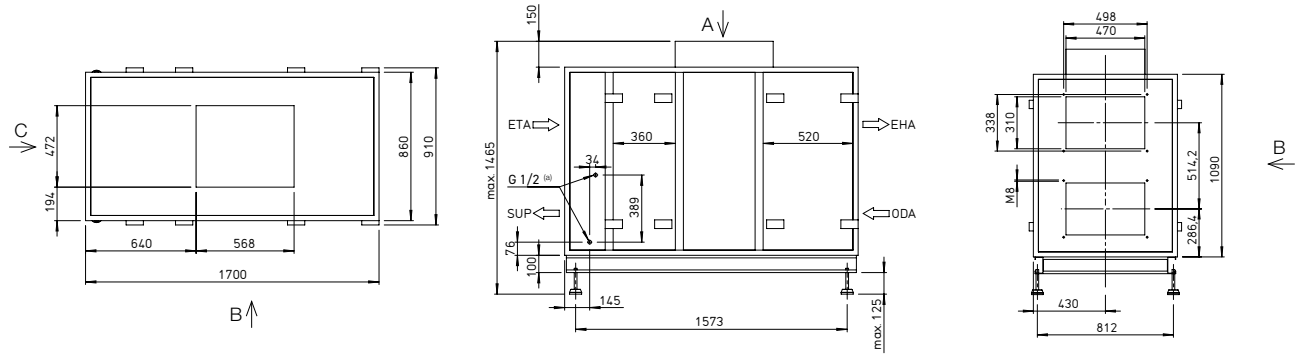

Dimensions in mm (a) Internal thread ODA: Outside air EHA: Exhaust air ETA: Extract air SUP: Supply air

Accessories

Heating and cooling registers		
Pre-heater		
AIR1-EVH RH 2000 Electrical, external	Ref. no. 01710	Page 93
Auxiliary heater		
AIR1-ENH RH 2000 Electrical, internal	Ref. no. 03616	Page 95
AIR1-NH WW RH 2000 Hot water, internal	Ref. no. 03806	Page 97
Hydraulic unit for hot water heater register		
WHSH HE 24 V (0 – 10 V)	Ref. no. 08318	Page 96
Cooling register		
AIR1-KR KW RH 2000 L (1) Cold water, external	Ref. no. 03959	Page 102
AIR1-KR KW RH 2000 R (1) Cold water, external	Ref. no. 04285	Page 102
AIR1-CO DX RH 2000 L (1) Change-over, external	Ref. no. 40391	Page 108
AIR1-CO DX RH 2000 R (1) Change-over, external	Ref. no. 40400	Page 108
AIR1-SM DX (2) Control module	Ref. no. 40408	Page 110
Cooling register accessories		
AIR1-KS B for use with floor-mounted units and cooling register	Ref. no. 07169	Page 114

Air routing		
Multi-leaf damper		
AIR1-JVK RH 2000	Ref. no. 06007	Page 111
Flexible connector		
AIR1-VS 47/31	Ref. no. 04373	Page 113
Potential equalisation cable		
PAK M8	Ref. no. 40812	Page 113
Adapter square-round		
AIR1-ÜS RH 2000 (DN 400)	Ref. no. 04368	Page 112

External installation		
Cover for external installation		
AIR1-AAD RH 2000 Weather protection cover for the unit	Ref. no. 06431	Page 117
AIR1-AAD KR KW + DX RH 2000 Weather protection cover for cooling register cold water or direct evaporator	Ref. no. 06468	Page 118
Terminal box heater		
AIR1-AAHK	Ref. no. 07064	Page 114
Hoods		
AIR1-AAHA RH 2000 Intake hood outside air	Ref. no. 06539	Page 115
AIR1-AAHF RH 2000 Discharge hood exhaust air	Ref. no. 06646	Page 115

Controls		
Controllers		
AIR1-BE ECO	Ref. no. 06186	Page 119
AIR1-BE TOUCH	Ref. no. 06187	Page 119
Controller connection cable		
AIR1-SL 4/10 10 m	Ref. no. 07073	Page 119
AIR1-SL 4/20 20 m	Ref. no. 07121	Page 119
Sensors		
AIR1/KWL-VOC 0-10V Mixed gas sensor	Ref. no. 20250	Page 119
AIR1/KWL-CO2 0-10V Carbon dioxide sensor	Ref. no. 20251	Page 119
AIR1/KWL-FTF 0-10V Humidity-temperature sensor	Ref. no. 20252	Page 119
AIR1-CO2 K Carbon dioxide sensor duct	Ref. no. 07124	Page 119
Signal converter for sensors		
AIR1-SK	Ref. no. 06019	Page 120
Extension kit for constant pressure control		
AIR1-CAP	Ref. no. 06756	Page 120
Duct smoke detector with VdS approval		
RMK	Ref. no. 04982	Page 120
Duct smoke detector with DIBt approval		
KRM	Ref. no. 40825	Page 120
KRM-MK Mounting bracket for KRM	Ref. no. 40826	Page 120
KRM-G Protective housing	Ref. no. 40847	Page 120
KRM-MKG Mounting bracket for protective housing	Ref. no. 40848	Page 120

Air filters		
Spare air filter and other filter classes		
ELF-AIR1 RH 2000/ePM10 50%/48 (M5)	Ref. no. 02193	Page 123
ELF-AIR1 RH 2000/ePM10 50%/96 (M5)	Ref. no. 02212	Page 123
ELF-AIR1 RH 2000/ePM1 55%/96 (F7)	Ref. no. 02237	Page 123
ELF-AIR1 RH 2000/ePM1 80%/96 (F9)	Ref. no. 02384	Page 123
The use of original spare air filters is mandatory to guarantee the specified technical data and air volumes.		

(1) = When looking at the cooling register from the air flow direction, the service side is on the right for the R version and on the left for the L version.
(2) = Necessary accessory in connection with an AIR1-CO DX change-over register for connecting an AIR1 ventilation unit of the XC, XH and RH series to the control of an on-site cooling system.